


# CleanPedi H6

## SKU25643

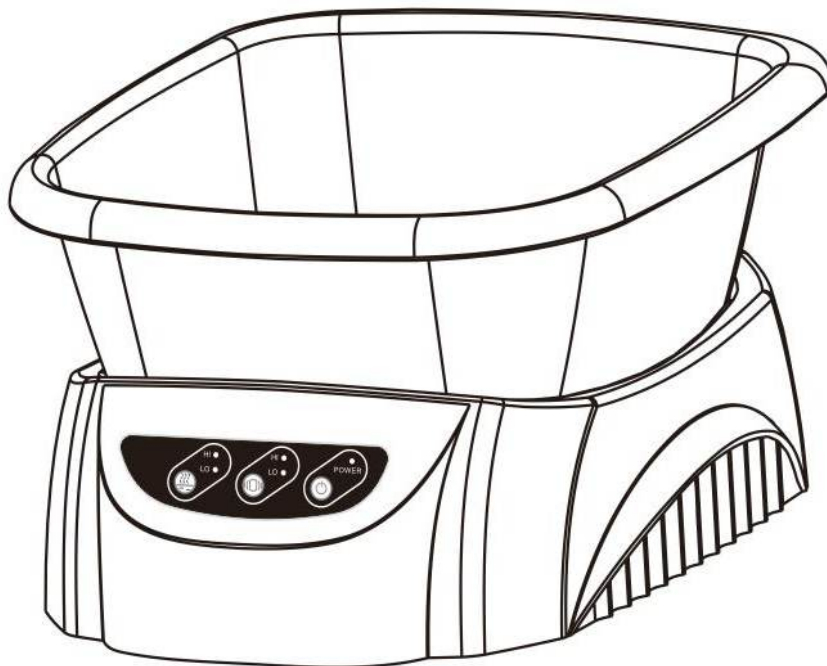

SKIN+ACT

Toll Free: 1.800.418.0830

[www.skinact.com](http://www.skinact.com)  
[www.spaandequipment.com](http://www.spaandequipment.com)

International: 818.834.6640

## NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

# SKIN+ACT

Toll Free: 1.800.418.0830

[www.skinact.com](http://www.skinact.com)  
[www.spaandequipment.com](http://www.spaandequipment.com)



International: 818.834.6640

## Recommended Use

- This product has been designed to be used by beauty professionals at beauty salons and should not be used for other purposes.
- Please note that any misuse of the device entails the loss of the guarantee.
- Do not make any modification to the device without the authorization
- we shall not be held liable for any material or personal damage due to the misuse of the product.

## Usage Restrictions

- While working, the aluminum of the basin is too hot, do not touch or put your feet on it directly.
- The base has a seal design, general splash water does not penetrate into the internal cause short circuit leakage, but everyday use it also need to be careful not to let water residue, after each use should be kept dry
- During the foot spa when you need to move the equipment, please grasp both sides of the armrest (as right picture) and move, pay attention to the water in the foot spa tub, or to take out the tub aside. Turn off the basin power, move the equipment to the place you need and then put on foot spa tub, after electrify continue to use.

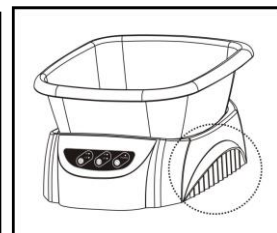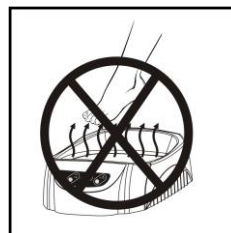

## Safety Notes





- Before using it for the first time and after each use, check the device and the mains cable for any damage.
- Unplug the device from the mains before starting to clean it or undertaking any type of maintenance.
- Do not use the product outdoors or in places where it may be affected by humidity or inclement weather.
- If the power supply cable is defective, unplug the appliance immediately and inform your dealer or specialized technician.
- Position the power supply cable properly so that people cannot trip over it and make sure you plug it into an earthed socket.
- At the end of the working day, disconnect the device and unplug the power supply cable from the mains.
- If you detect any anomaly in the operation of the product, please contact your distributor or specialized technician.

## Safety Instructions

- The device and accessories should be kept out of the reach of children.
- Only plug the device into a properly installed socket. The local mains voltage must correspond to the technical specifications of the device.
- The power socket must be accessible in case you have to quickly unplug the device at any given time.
- Always pull out the actual plug and not the mains cable.

- Never tamper with any electrical component or open up/repair any component of the device, Only your distributor or specialized technician should repair the device.
- Do not switch on the device if there is visible damage to it or to the mains cable.
- Never touch the device or the mains cable with wet hands.

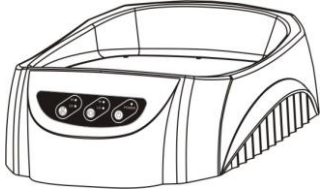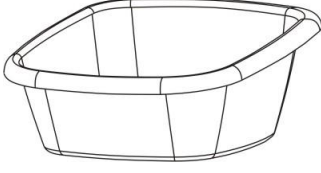**Packing list**


| Item               | Product description   | Qty    |
|--------------------|---|--------|
| Basin              |    | 1 pcs  |
| Foot spa tub       |    | 1pcs   |
| Massage rubber mat |    | 1pcs   |
| Instruction manual |  | 1 copy |

**Specifications and Technical Data**

|                     |                        |
|---------------------|------------------------|
| Product name        | Pedicure Equipment     |
| Item number         | H6605                  |
| Function            | Footbath、 Foot massage |
| Rated Voltage/Power | AC 100-120V ~          |
|                     | AC 220-240V ~          |
| Working Frequency   | 50/60Hz                |
| Rated Power         | 130W                   |
| Dimension (L*W*H)   | 505*400*265mm          |
| N.W                 | 3.75Kg                 |

**Panel**


- 1 Heating button
- 2 Vibration button
- 3 Power button
- 4 Heating indicator light
- 5 Vibration indicator light
- 6 Power indicator light

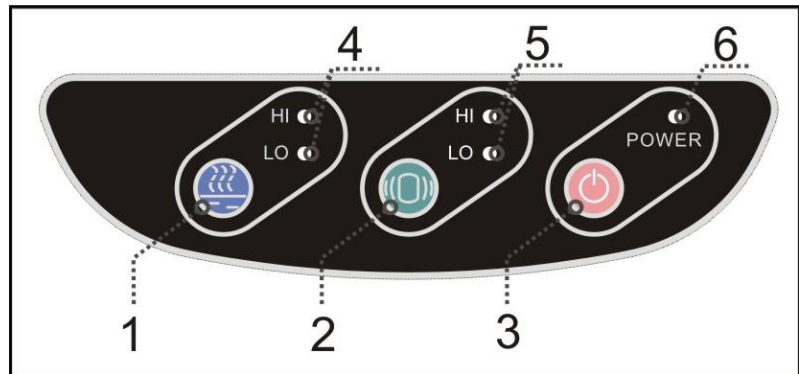


**Preparation before using:**



**Put on water**

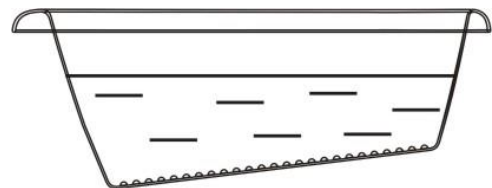Put certain warm water in the foot spa tub (if use cold water heated to a suitable temperature for footspa, need a certain amount of time is approximately 30 minutes) it is better to soaked in the ankle, if too much water, heating time increases accordingly.



## Foot Spa

First, according to the direction of the arrows, put the foot spa tub with water on the basin, pay attention to the foot pelvic floor surface tilt direction. Second, plug the power plug, press the power key , blue power indicator light go on, according to your need, you can press heating

button  and vibration button . Turn on or off heating and vibration function, they all have two choices, **HI** indicator light is red, it means high temperature and strong vibration, **LO** indicator light is green, it means low temperature and weak vibration. If you need to turn off this two functions, just press **HI** and **LO** indicator light until they are off

Choose which function you need and you can do the foot spa.(as right picture)

When you finish foot spa, press power button and all the indicator light will be turned off.

Unplug the power cord, put off all the water in the tub and clean it, it can be used next time.

## Foot Massage

When you doing foot massage, take out the foot spa tub, according to the arrows as right picture, put the massage rubber mat on the basin and plug the power plug, press the power button, panel operation is the same as foot spa, you can choose heating and vibration function (heating function recommend **LO**,**HO** is high temperature and occur uncomfortable)

Put your feet on the massage rubber mat and you can enjoy foot massage (as right picture).

