

# Paraffin Warmer Machine (SKU16234)



**SKIN+ACT**

Toll Free: 1.800.418.0830

[www.skinact.com](http://www.skinact.com)  
[www.spaandequipment.com](http://www.spaandequipment.com)

International: 818.834.6640

## NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

# SKIN+ACT

Toll Free: 1.800.418.0830	<a href="http://www.skinact.com">www.skinact.com</a> <a href="http://www.spaandequipment.com">www.spaandequipment.com</a>	International: 818.834.6640
---------------------------	--	-----------------------------

# User Manual

## Introduction

Thank you for purchasing our Wax Therapy Appliance. Please read this manual carefully before use. After familiarizing yourself with the instructions, you will be able to enjoy its excellent performance and therapeutic effects.

## Part 1: Function Overview

Wax therapy is widely used in beauty care due to its remarkable effects and ease of operation. It is especially beneficial for:

- Dry or aging skin
- Wrinkled skin
- Skin needing nourishment and moisture, particularly in autumn or winter

### Benefits of Wax Therapy:

- Provides essential elements such as vitamins and collagen.
- Helps reduce wrinkles and brighten the skin.
- Stimulates sweat gland activity and improves metabolism.
- Warms and softens the skin, making it smooth and tender.
- Promotes blood circulation and helps vanish minor wrinkles.
- Used for face, hands, feet, and whole-body care.


## Part 2: Panel Overview

### Front Panel:

- Temperature Display
- Temperature Up Button
- Temperature Down Button
- Power Switch

### Back Panel:

- Power Socket
- Fuse

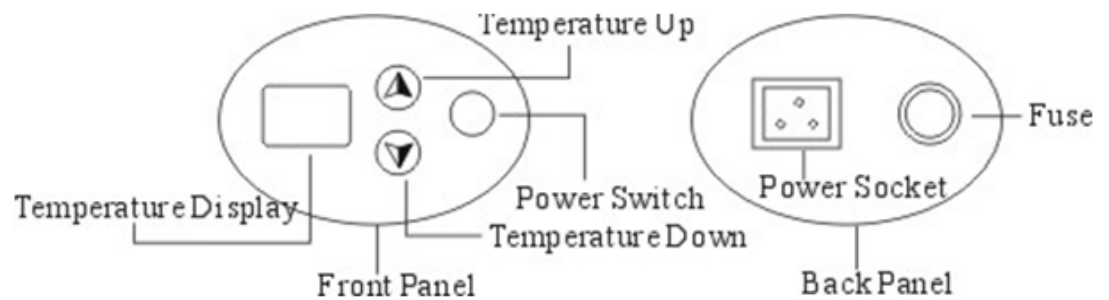

## Part 3: Operating Instructions

1. Plug one end of the power cord into the power socket, and the other into a commercial outlet (220V/110V).
2. Press the Power Switch. The device will begin heating (default setting: 50°C).
3. Adjust the temperature as needed:
  - Heat up to 65°C until wax is fully melted.
  - Lower to 55°C for use.
  - Maintain between 45–55°C for safe application.
4. The appliance automatically keeps the wax at a constant temperature.

## **Part 4: Usage Instructions**

### **Hand Treatment**

1. Wash hands and remove jewelry. Test wax temperature on your finger first.
2. Dip hands into wax for 2–3 seconds, then remove.
3. Repeat dipping 4–6 times until hands are coated with a thick wax layer.
4. Wrap hands in plastic gloves or a warm glove to retain heat.
5. After 15–20 minutes, remove gloves and peel off wax.
6. Hands will become soft, smooth, and nourished.

### **Foot Treatment**

1. Wash feet and test wax temperature with your finger.
2. Soak feet in wax for 2–3 seconds (apply with a brush if dipping is not possible).
3. Repeat dipping 4–6 times until coated with a thick wax layer.
4. Wrap feet in a plastic bag or warm cover.
5. After 15–20 minutes, remove cover and peel off wax.
6. Feet will become soft, smooth, and springy.

## **Part 5: Professional Application**

- Face Treatment: Wash and analyze the skin, apply massage lotion, and steam the face for 5 minutes. Apply wax mask if temperature is suitable.
- Hands & Feet Treatment: Wash, test temperature, dip in wax, and wrap as described above.

## **Part 6: Technical Specifications**

- Working Voltage: 220VAC or 110VAC
- Power Consumption: 150W
- Frequency: 50Hz / 60Hz

## **Attention & Safety Notes**

1. Always test wax temperature on the wrist before use to avoid burns.
2. Do not use on broken, inflamed, or acne-affected skin.
3. Shut down the appliance after use. Do not reheat solidified wax until the surface layer is melted.
4. Wax depth in the pot should not exceed half its height.
5. Repairs should only be done by authorized service technicians. Do not disassemble by yourself.
6. Appliance is for professional use only.

## **Dimensions:**

Size: 15.7"L x 10.6"D x 10.2"H