

48 Piece Double Hot Towel Cabinet Plus UV Sterilizer (SKU16726)



SKIN+ACT

Toll Free: 1.800.418.0830

www.skinact.com
www.spaandequipment.com

International: 818.834.6640

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

SKIN+ACT

Toll Free: 1.800.418.0830	www.skinact.com www.spaandequipment.com	International: 818.834.6640
---------------------------	------------------------------------------------------------------------------------------------------------------------------	-----------------------------

WARNING – UV MODELS ONLY


- This towel warmer with ultraviolet (UV) lamp operates only when the door is fully closed.
- If the door is open, UV radiation may be harmful to people.
- Never look directly at the UV lamp and never operate the unit with the door open.

IMPORTANT NOTES

- Wring towels well before placing them in the towel warmer. They should be slightly damp, not dripping wet, to avoid excess water inside the cabinet.
- Do not overfill the cabinet. Leave space between the towels and the inner walls so the warm air can circulate.
- For models with UV lamp: always close the door completely before use to avoid exposure to UV rays.
- For models with UV lamp: the UV lamp turns on and off automatically during normal operation as controlled by the internal temperature system.


SAFETY PRECAUTIONS

- Connect the unit only to a properly grounded (earthed) outlet.
- Warming time may be longer on very cold or freezing days.
- After each use, empty and clean the drip tray.
- UV lamp repairs must be performed only by Essential Med Tools or an authorized service center.

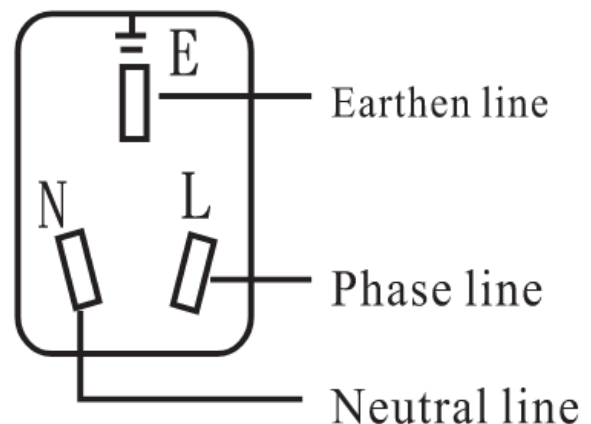

- Immediately switch OFF and unplug the unit if any abnormal condition occurs, such as:
 - Unusual noise
 - Burning smell
 - Excessive temperature
 - Presence of smoke
- Any internal repair must be performed by a licensed electrician and/or EMT.
- This product is not designed for use by children. Keep it out of reach of children.
- Repair or replacement of the power cord must be performed only by a licensed electrician.

PARTS LIST

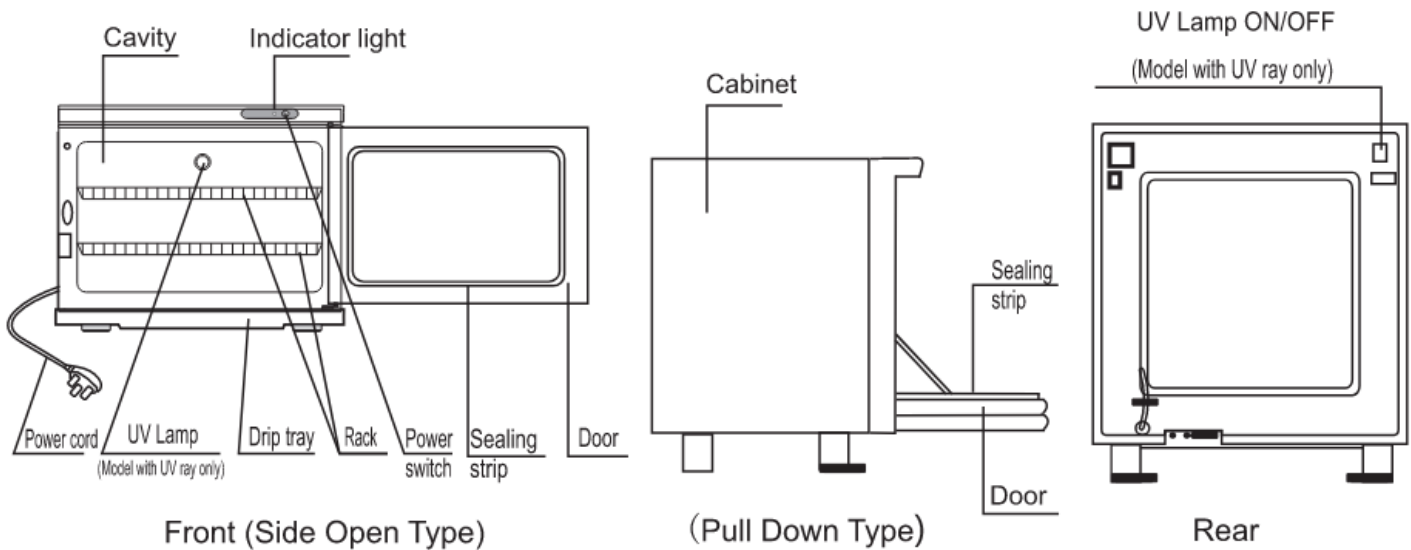

SPECIFICATIONS

- Model Name: SKU16726
- Feature: With UV Lamp
- Power Supply: 120 V ~ 60 Hz
- Power Input: 360 W
- Capacity: 32 L
- Warming Temperature: 158°F – 175°F (70°C – 80°C)
- UV Lamp Life: ≥ 1000 hours
- Heater Life: ≥ 3000 hours
- Rack Capacity: 160–200 wet towels or up to 40 facial towels
- Net Weight: 22 lb
- Product Size (H × W × D): 17.6" × 16.1" × 16.7"

USER GUIDE – DUAL-LAYER OPERATION

- This model has upper and lower warming layers that can be controlled independently.
- The upper layer can warm towels with UV sterilization.
- The lower layer warms towels without UV.

Using the Upper Layer (with UV)

1. Place the towels on the upper rack and close the door.
2. Press the Upper Power ON switch. The indicator light will turn on.
3. To use UV sterilization, press the UV Lamp ON switch located at the rear of the unit.
4. To warm towels without UV in the upper layer, leave the UV switch in the OFF position.

Using the Lower Layer (no UV)

1. Place the towels on the lower rack and close the door.
2. Press the Lower Power ON switch. The indicator light will turn on.
3. The lower layer will warm the towels without UV.

Turning the Unit OFF

- Press the Upper and/or Lower Power OFF switch. The corresponding indicator light(s) will turn off and those sections will stop heating.
- For UV models, also set the UV switch to OFF when UV sterilization is not required.

Door Safety (UV Models Only)

- The UV lamp automatically turns OFF when the door is opened.
- The UV lamp automatically turns ON again when the door is closed, provided the UV switch is in the ON position.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
Not working	Plug not fully inserted or damaged	Check and reinsert plug; repair if needed
	Temperature controller failure	Replace temperature controller
	Power cord damaged	Replace power cord
UV lamp not working (<i>UV models only</i>)	Door switch failure	Replace door switch
	UV lamp burned out	Replace UV lamp
No heating	Heater failure	Replace heater
	Temperature controller failure	Replace temperature controller

If the problem persists after performing the steps above, disconnect the unit and contact Essential Med Tools or a licensed service technician. Do not attempt further repairs yourself.