

# Mini Hot Towel Cabinet And Sterilizer (SKU17561)



**SKIN+ACT**

Toll Free: 1.800.418.0830

[www.skinact.com](http://www.skinact.com)  
[www.spaandequipment.com](http://www.spaandequipment.com)

International: 818.834.6640

## NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make expressed or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

# SKIN+ACT

|                           |  |                             |
|---------------------------|--|-----------------------------|
| Toll Free: 1.800.418.0830 | <a href="http://www.skinact.com">www.skinact.com</a><br><a href="http://www.spaandequipment.com">www.spaandequipment.com</a> | International: 818.834.6640 |
|---------------------------|--|-----------------------------|

# User Manual

## Function

The towel warmer uses ultraviolet light and ozone to sterilize items.

- Effectively eliminates E. coli, Staphylococcus aureus, Bacillus subtilis, spores, and viruses such as hepatitis B.
- Suitable for sterilizing towels and other beauty tools that are not heat-resistant.

## Hot Cabinet Mode

Sterilization by high temperature or violet (UV) light.

## Operating Instructions

- A. Pull the handle to open the cabinet.
- B. Place the towel inside.
- C. Close the cover and turn on the power switch.
- D. For UV sterilization, switch on the Violet Light Switch.

## Notices

1. The temperature inside the cabinet becomes high — avoid direct contact.
2. Clean the water plate regularly to maintain hygiene.


## Technical Specifications

- Voltage: 220V–240V / 110V–130V
- Frequency: 50Hz–60Hz
- Power: 170W (220V) / 165W (110V)
- Sterilization Time:  $\geq 15$  minutes
- Volume: 4.5L
- Category of electric shock prevention: Category 1

**Note:** Always follow the electrical ratings on the appliance nameplate.

## Operating Panel

- Power Switch – Turns the unit on/off
- Violet Light Switch – Activates UV sterilization
- Handle – Opens/closes cabinet door
- Water Plate – Collects condensation, must be cleaned regularly

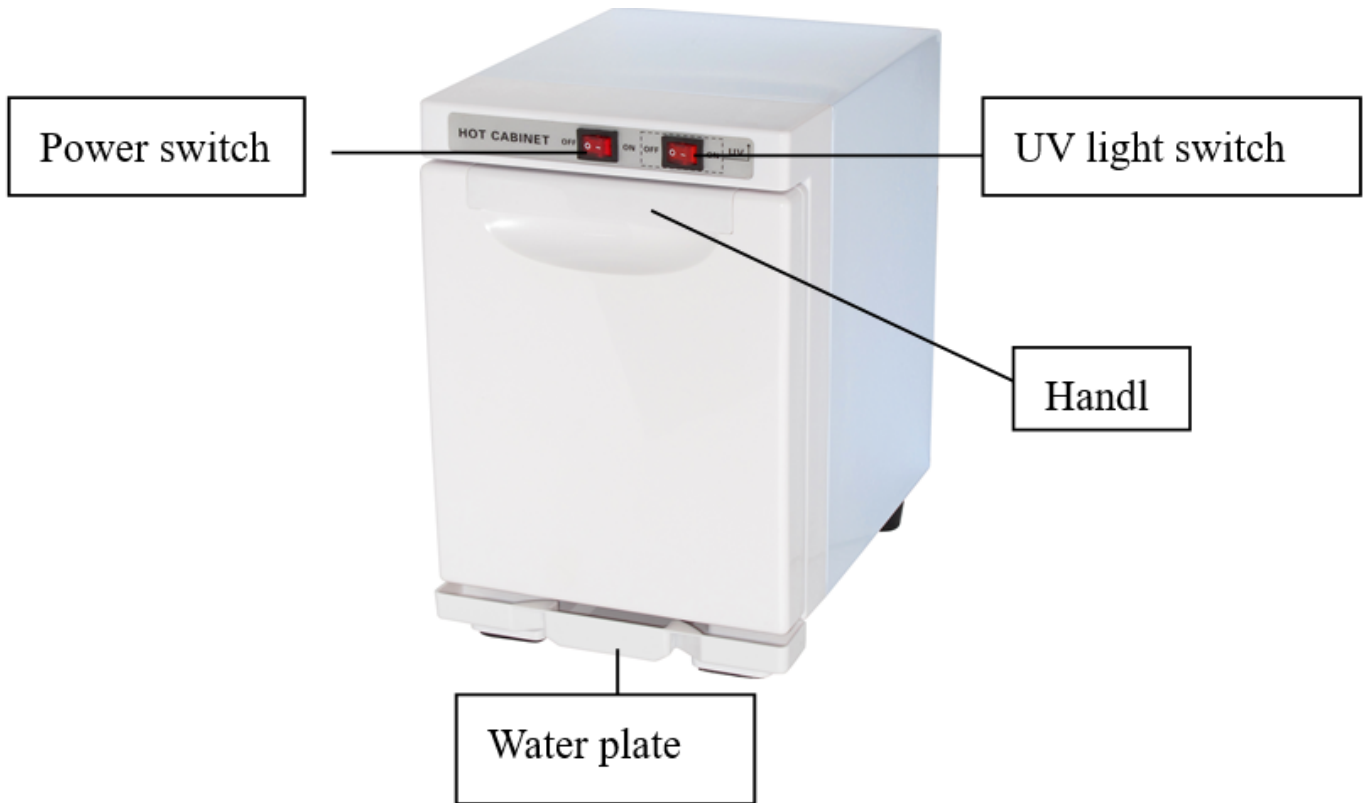

## Warnings

- 1.This appliance is not suitable for persons with reduced physical or mental capabilities (including children) unless supervised by someone responsible for safety.
- 2.Children must not play with the device and should always be supervised.

# Dimensions

