


SKIN+ACT

12 Piece Hot Towel Cabinet With Sterilizer UL Certified

PRODUCT MANUAL

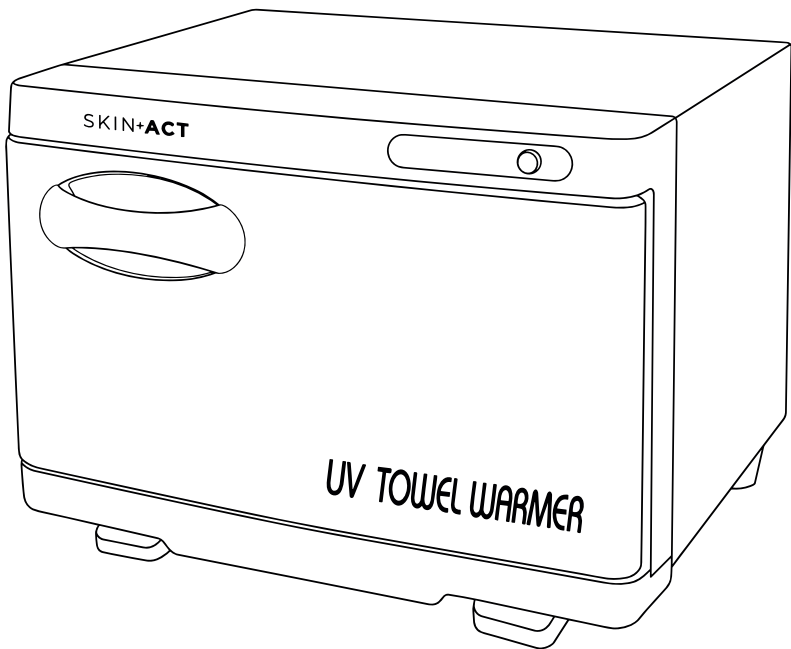

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make any express or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

Thank You For Purchasing This Product!

Please read the entire instruction manual carefully before using the product. Take note of any warnings included in this manual.

Always keep this instruction manual handy. If you give the device to another person, include this manual, as it is an essential part of the product.

Some components of the product may differ from the image that appears in catalogues, websites, brochures, etc.

In order to enhance the product, the manufacturer reserves the right to modify its features and/or components without prior notice.

TABLE OF CONTENTS

Disclaimer 4

UV Safety Warning 5

Towel-Warmer Precautions 5

Safety Precautions 5

Emergency Shutdown and Service 5

Product Components 6

Operating Instructions 7

Troubleshooting 7

Specifications 8

Warranty Information 9

DISCLAIMER

This product is intended for professional use by trained spa, salon, esthetic, wellness, or other qualified professionals. It must be used only for its intended purpose and in accordance with all instructions, warnings, contraindications, maintenance requirements, and safety guidelines provided in this manual.

The information in this manual is for general product operation and safety reference only. It does not replace professional training, licensing requirements, medical advice, service instructions, applicable laws, or workplace safety rules. Users are responsible for proper training, safe operation, inspection, client screening when applicable, sanitation, maintenance, and compliance with all applicable regulations.

SkinAct/Spa and Equipment does not provide medical advice and does not diagnose, treat, cure, or prevent any disease, medical condition, injury, or skin disorder. Any treatment descriptions, suggested uses, or expected results are for general cosmetic and professional use reference only, and results may vary.

Before each use, inspect the product, power cord, accessories, attachments, moving parts, and related components, as applicable, for damage, looseness, contamination, instability, or abnormal operation. Do not use the product if it appears damaged, defective, improperly assembled, unsafe, or if any component is missing or malfunctioning.

The user assumes full responsibility for proper assembly, installation, operation, client selection when applicable, treatment technique when applicable, cleaning, maintenance, and storage. SkinAct/Spa and Equipment shall not be responsible for injury, property damage, treatment complications, equipment damage, loss of business, or other damages resulting from misuse, improper use, lack of training, failure to follow instructions, unauthorized repairs or modifications, improper maintenance, or use outside the intended purpose.

Do not modify, disassemble, repair, or alter this product unless authorized in writing by SkinAct/Spa and Equipment or performed by an approved service provider. Unauthorized modification, misuse, improper maintenance, or failure to follow this manual may void the warranty.

Product designs, specifications, components, accessories, images, and instructions may vary from the actual product and may be changed or updated without prior notice.

Users are responsible for properly preparing clean towels, operating the unit safely, maintaining the equipment, and complying with all applicable state and local sanitation regulations.

This unit is intended to warm towels and provide the supplemental UV function described in this manual. It does not replace required laundering, cleaning, disinfection, or sterilization procedures. Do not use the unit to process instruments unless that use has been specifically validated and authorized by SkinAct.

UV Safety Warning

- The ultraviolet (UV) lamp operates only when the cabinet door is fully closed.
- Never look directly at the UV lamp or operate the unit with the door open.
- Do not bypass, disable, or modify the door safety switch.
- If the UV lamp remains on when the door is opened, unplug the unit immediately and contact SkinAct. Do not use the unit until it has been inspected.

Important

- Wring out towels thoroughly before placing them in the warmer. Towels should be slightly damp—not dripping wet—to prevent excess water from collecting inside the cabinet.
- Do not overfill the cabinet. Leave space between the towels and interior walls to allow warm air to circulate.
- On UV-equipped models, close the door completely before operation to prevent UV exposure.
- The UV lamp may cycle on and off automatically during normal operation.


Safety Precautions

- Connect the unit only to a properly grounded electrical outlet.
- Heating may take longer when the unit is operated in a cold environment.
- Empty and clean the drip tray after each use.
- UV lamp inspection, replacement, and repair must be performed only by SkinAct or an authorized service provider.

Emergency Shutdown and Service

- Immediately turn off and unplug the unit if it produces an unusual noise, burning odor, excessive heat, smoke, sparks, or any other abnormal condition.
- Do not resume operation until the unit has been inspected and confirmed safe.
- Internal inspection and repair must be performed only by SkinAct or a qualified service technician.
- This product is not intended for use by children. Keep the unit and power cord out of their reach.
- A damaged power cord must be replaced only by SkinAct or a qualified electrician or service technician.

Product Components

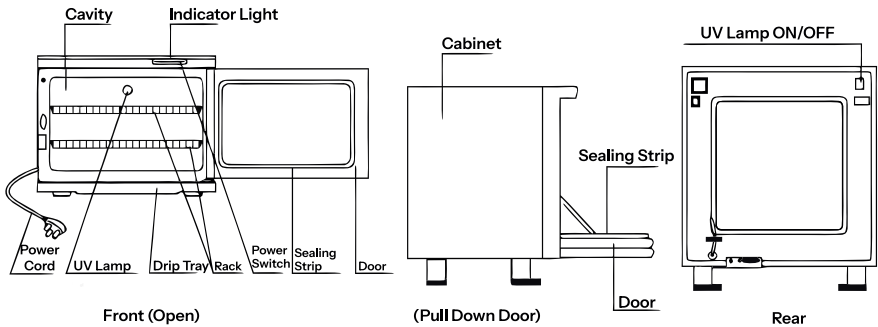

Operating Instructions

Preparing the Towel Warmer

1. Place the towel warmer on a stable, level, heat-resistant surface.
2. Connect the unit to a properly grounded electrical outlet.
3. Wring out the towels thoroughly so they are damp but not dripping.
4. Arrange the towels evenly on the rack without overfilling the cabinet.
5. Close the door completely.

Heating With the UV Function

1. Press the ON switch. The power indicator will illuminate.
2. Set the UV switch on the rear of the unit to ON.
3. Keep the door fully closed while the UV function is operating.

Heating Without the UV Function

To warm towels without using UV, leave the UV switch in the OFF position and press the ON switch.

Door Safety

- Opening the door automatically turns off the UV lamp.
- Closing the door automatically turns the UV lamp on again when the UV switch remains in the ON position.
- If the UV lamp remains illuminated while the door is open, turn off and unplug the unit immediately. Do not use it until it has been inspected by SkinAct or a qualified service technician.

Turning Off the Unit

1. Set the UV switch to OFF.
2. Press the OFF switch. The power indicator will turn off, and the unit will stop heating.
3. Unplug the unit when it is not in use or will be stored for an extended period.

Troubleshooting

Unit Does Not Operate

Solution: Confirm that the power plug is fully inserted into a properly functioning electrical outlet. Inspect the power cord and plug for visible damage. If the unit still does not operate, unplug it and contact SkinAct. The power cord or temperature controller may require inspection or replacement by a qualified service technician.

UV Lamp Does Not Operate—UV Models Only

Solution: Confirm that the UV switch is set to ON and the cabinet door is fully closed. If the UV lamp still does not operate, unplug the unit and contact SkinAct. The UV lamp or door safety switch may require replacement by a qualified service technician.

Unit Does Not Heat

Solution: Confirm that the unit is connected to a working electrical outlet and the power switch is set to ON. If the unit still does not heat, unplug it and contact SkinAct. The heater or temperature controller may require inspection or replacement by a qualified service technician.

Do not open the housing or attempt internal repairs. If the problem continues, disconnect the unit from the electrical outlet and contact SkinAct.

Specifications

Product Name:	12 Piece Hot Towel Cabinet With Sterilizer UL Certified
Voltage:	120 V AC
Frequency:	60 Hz
Power Consumption:	130 W
Temperature Range:	146-168°F
UV Lamp Life:	≥1,000 Hours
Heater Life:	≥3,000 Hours
Capacity:	8 L
Product Size (L * D * H):	14 x 10.5 x 10 in.
Net Weight:	8 lbs

Warranty Information

The manufacturer/warrantor warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and proper use for a period of one (1) year from the original date of purchase, unless otherwise stated in writing for a specific product.

This limited warranty applies only to the original purchaser and is not transferable. Proof of purchase may be required to obtain warranty service.

This warranty covers parts and labor required to correct defects in materials or workmanship during the warranty period. At the warrantor’s discretion, the product may be repaired, replaced, or substituted with a comparable item or component.

This warranty does not cover damage or defects caused by misuse, abuse, improper assembly, improper installation, unauthorized modification, unauthorized repair, neglect, accident, improper cleaning, use of harsh chemicals, power surges, water or liquid damage, use outside the intended purpose, failure to follow the product manual, or use with parts/accessories not approved by SkinAct/Spa & Equipment.

This warranty does not cover normal wear and tear, cosmetic damage, stains, discoloration, scratches, dents, disposable or consumable items, or accessories subject to regular replacement unless the defect is determined to be due to a manufacturing issue.

The warrantor shall not be liable for loss of use, loss of time, loss of business, lost revenue, inconvenience, or any indirect, incidental, special, or consequential damages arising from the use of this product or from any defect covered by this warranty. To request warranty service, contact the SkinAct/Spa & Equipment customer support. If return service is required, the purchaser may be asked to return the product or the affected component for inspection. The purchaser is responsible for properly packaging the item and prepaying all shipping costs to send the item in for warranty service. If the issue is covered under warranty, repair or replacement will be performed at no charge, subject to the terms of this limited warranty.

This limited warranty is the only written or express warranty provided by the warrantor. No employee, representative, dealer, or third party is authorized to modify or extend this warranty unless confirmed in writing by SkinAct/Spa & Equipment. This warranty gives you specific legal rights, and you may also have other rights, which vary by state or province.

SKIN+ACT

Phone:1-800-418-0830

Email:info@skinact.com

Website:www.skinact.com