


PARTS

- Remove all parts from the box and position them all in front of you
- Read the assembly instructions carefully before proceeding.
- Do not dispose of packing materials until assembly is completed.

Qty	Part Name	
1	Lower Shelf	
1	Headrest	
1	Hanging Arm Rest	
1	Table Paper Holder	
4	Legs	
8	Screw A - 8mm x 60mm	
8	Screw B - 6mm x 35mm	
8	Nut Cap - For Screw A	
8	Nut A - For Screw B	
2	Allen Wrench	

ASSEMBLY AND INSTALLATION INSTRUCTIONS

Step 1

- Place the **Cushion Assembly** upside down on a flat surface with the cushion side down.

Step 2

- Place the legs at the four corners and loosely attach them to the cushion frame using **Screws A** and the **Nut Caps**. Do not fully tighten the screws. Once all four legs are properly aligned, tighten each screw securely.

Step 3

- Secure the **Lower Shelf** onto the four legs using **Screw B** and the **Nuts**. Tighten until secure.

Step 4

- Turn the table upright and make sure it is flat.

Step 5

- Fix the **Hanging Armrest** onto the **Headrest Assembly** by securing the straps onto each pole.

Step 6

- Slide the **Headrest Assembly** into the top of the table (the side with the reclining backrest)

Step 7

- Open up the **Table Paper Holder**, secure on a notch, then slide into the foot area of the treatment table.



NEED EXTRA HELP?

SCAN THIS QR CODE TO WATCH THE VIDEO ASSEMBLY GUIDE!

WARRANTY INFORMATION

The manufacturer/warrantor warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and proper use for a period of one (1) year from the original date of purchase, unless otherwise stated in writing for a specific product.

This limited warranty applies only to the original purchaser and is not transferable. Proof of purchase may be required to obtain warranty service.

This warranty covers parts and labor required to correct defects in materials or workmanship during the warranty period. At the warrantor's discretion, the product may be repaired, replaced, or substituted with a comparable item or component.

This warranty does not cover damage or defects caused by misuse, abuse, improper assembly, improper installation, unauthorized modification, unauthorized repair, neglect, accident, improper cleaning, use of harsh chemicals, power surges, water or liquid damage, use outside the intended purpose, failure to follow the product manual, or use with parts/accessories not approved by SkinAct.

This warranty does not cover normal wear and tear, cosmetic damage, upholstery wear, stains, discoloration, scratches, dents, wheels/casters, bulbs, glass parts, filters, tips, probes, disposable parts, consumables, or accessories subject to regular replacement unless the defect is determined to be due to a manufacturing issue.

The warrantor shall not be liable for loss of use, loss of time, loss of business, lost revenue, inconvenience, or any indirect, incidental, special, or consequential damages arising from the use of this product or from any defect covered by this warranty.

To request warranty service, contact the dealer or SkinAct customer support. If return service is required, the purchaser may be asked to return the product or the affected component for inspection. The purchaser is responsible for properly packaging the item and prepaying all shipping costs to send the item in for warranty service. If the issue is covered under warranty, repair or replacement will be performed at no charge, subject to the terms of this limited warranty.

Warranty does not cover damage, contamination, upholstery damage, sanitation-related issues, injury claims, or equipment issues resulting from improper cleaning, improper maintenance, misuse, use by untrained users, or use outside applicable safety guidelines. This limited warranty is the only written or express warranty provided by the warrantor. No employee, representative, dealer, or third party is authorized to modify or extend this warranty unless confirmed in writing by SkinAct. This warranty gives you specific legal rights, and you may also have other rights, which vary by state or province.

SKIN+ACT

Phone:1-800-418-0830

Email:info@skinact.com


Website:www.skinact.com

SKIN+ACT

ELEGANCE

SPA MASSAGE TABLE

ASSEMBLY GUIDE

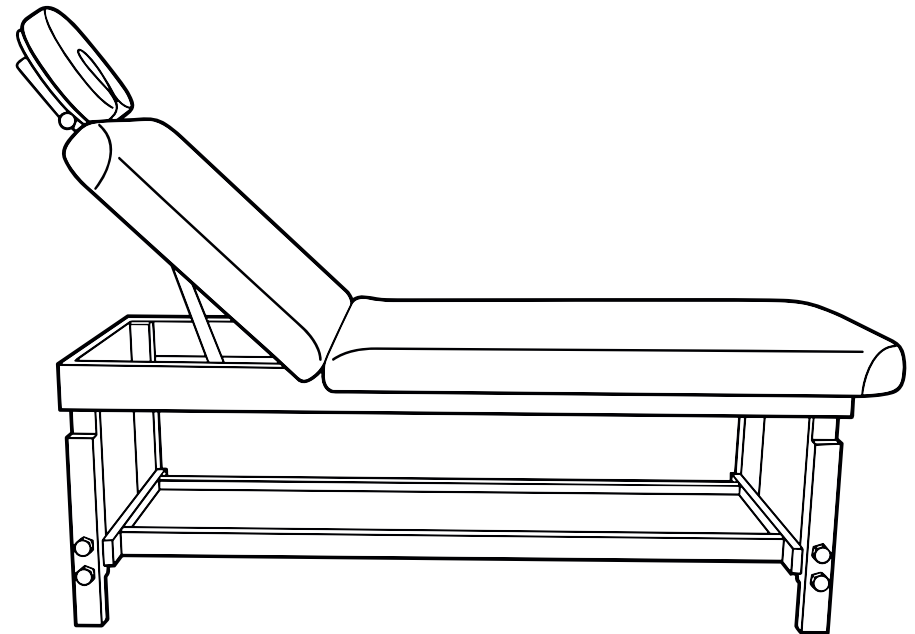

SKU16548

SKINACT.COM