

SKIN+ACT

Elite Salon Shampoo Chair

PRODUCT MANUAL

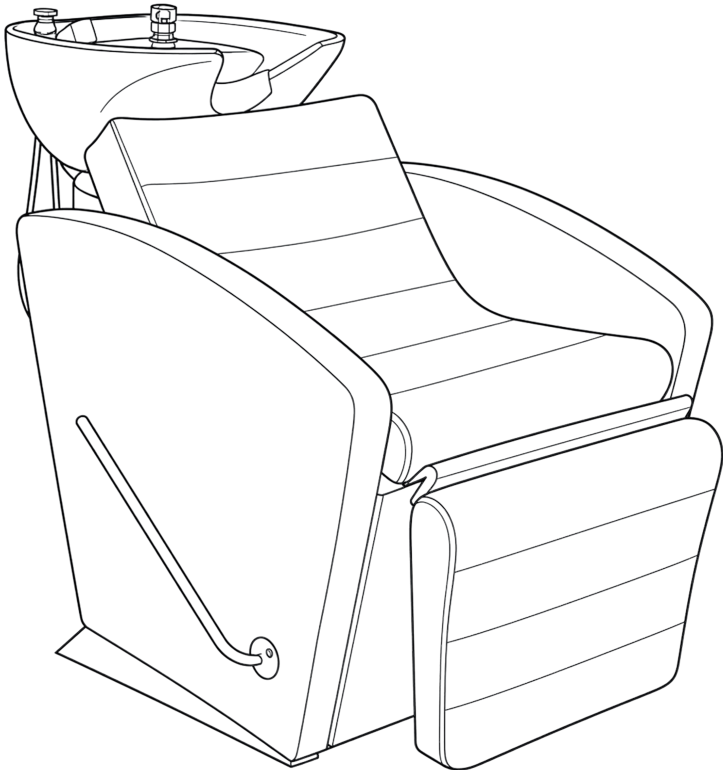


TABLE OF CONTENTS

Notice & Disclaimer3

Safety and Operating Instructions 4

Safety Precautions 5

Installation Requirements 6

Lifespan Expectations & Maintenance 6

Parts Included 7

Dimensions 8

Expansion Screw Installation 9

Shampoo Bowl Mixer Faucet Installation 10

Footrest Control 11

Shampoo Bowl Adjustment 11

Maintenance 12

Troubleshooting 12

Specifications 13

Warranty Information 14

NOTICE

No part of this document may be photocopied, reproduced, or translated into any other language without prior written consent of Spa and Equipment/SkinAct.

The information in this document is subject to change without notice at any time and should not be construed as a commitment by Spa and Equipment/SkinAct.

Spa and Equipment/SkinAct assumes no responsibility for any errors that may be in this document, nor does it make any express or implied warranty with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Spa and Equipment/SkinAct shall not be liable for incidental or consequential damages arising out of the furnishing, performance, or use of this document and the program material which it describes.

DISCLAIMER

This product is intended for professional use by trained spa, salon, esthetic, wellness, or other qualified professionals. It must be used only for its intended purpose and in accordance with all instructions, warnings, contraindications, maintenance requirements, and safety guidelines provided in this manual.

The information in this manual is for general product operation and safety reference only. It does not replace professional training, licensing requirements, medical advice, service instructions, applicable laws, or workplace safety rules. Users are responsible for proper training, safe operation, inspection, client screening when applicable, sanitation, maintenance, and compliance with all applicable regulations.

SkinAct/Spa and Equipment does not provide medical advice and does not diagnose, treat, cure, or prevent any disease, medical condition, injury, or skin disorder. Any treatment descriptions, suggested uses, or expected results are for general cosmetic and professional use reference only, and results may vary.

Before each use, inspect the product, power cord, accessories, attachments, moving parts, and related components, as applicable, for damage, looseness, contamination, instability, or abnormal operation. Do not use the product if it appears damaged, defective, improperly assembled, unsafe, or if any component is missing or malfunctioning.

The user assumes full responsibility for proper assembly, installation, operation, client selection when applicable, treatment technique when applicable, cleaning, maintenance, and storage. SkinAct/Spa and Equipment shall not be responsible for injury, property damage, treatment complications, equipment damage, loss of business, or other damages resulting from misuse, improper use, lack of training, failure to follow instructions, unauthorized repairs or modifications, improper maintenance, or use outside the intended purpose.

Do not modify, disassemble, repair, or alter this product unless authorized in writing by SkinAct/Spa and Equipment or performed by an approved service provider. Unauthorized modification, misuse, improper maintenance, or failure to follow this manual may void the warranty.

Product designs, specifications, components, accessories, images, and instructions may vary from the actual product and may be changed or updated without prior notice.

This product contains electric adjustment components and moving parts. Improper use may cause injury, pinching, equipment damage, or unsafe operation. Users are responsible for operating the chair safely and following all instructions, warnings, and maintenance requirements in this manual. The user is solely responsible for confirming that use of this device is permitted under applicable state/local laws, scope-of-practice rules, licensing requirements, and workplace safety standards. This device is not intended for self-use, home use, or use by untrained individuals.

Safety and Operating Instructions

To ensure safe and proper operation of this shampoo chair, please read the following instructions carefully and retain this manual for future reference.

- **Proper Grounding:**

This electric shampoo chair is equipped with a three-prong power cord. It must be plugged into a properly grounded three-prong outlet during use to ensure proper grounding, help prevent electric shock, and support normal operation of the unit.

- **Avoid Water Exposure:**

All plugs, buttons, and connecting cables must not come into contact with water or any other liquids during use.

- **Inspect for Damage:**


Immediately discontinue use of the chair if any plugs, buttons, or connecting cables are damaged.

- **Caution:**

When operating any function, do not place hands, feet, head, or other body parts near the areas marked ① and ② in the diagram.


- **Professional Repairs Only:**

Repairs and maintenance must be conducted exclusively by trained and qualified professionals.

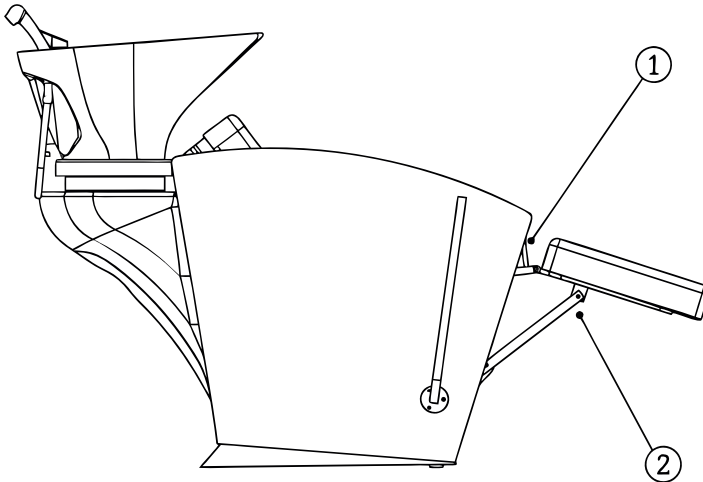

Safety Precautions

- This product is not recommended for individuals with osteoporosis, heart conditions, or other serious medical concerns. Consult a healthcare professional before use.
- Pregnant individuals should consult a healthcare professional before using this product.
- Do not use the product on areas with open wounds, active infections, or skin conditions.
- Keep hands, feet, head, and other body parts away from gaps, hinges, and moving mechanical components while adjusting the unit.
- Maintenance and repairs must be performed only by trained and qualified technicians.
- Do not disassemble, modify, or repair the product without authorization. Contact the distributor or an authorized service provider for assistance.

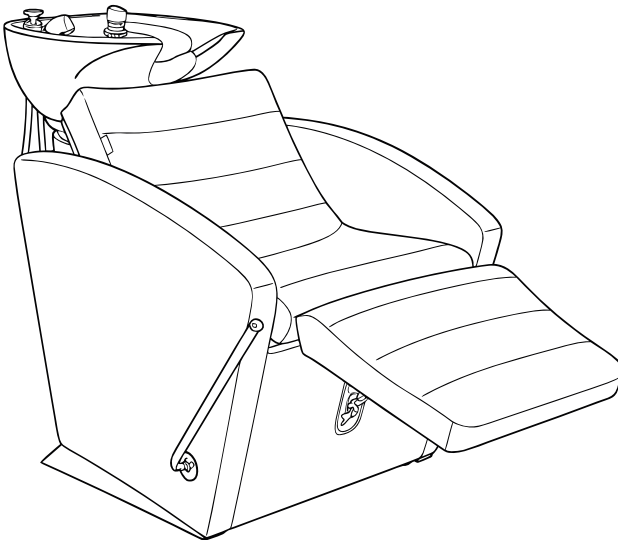

Installation Requirements


- All plumbing-related equipment must be installed by a licensed plumber, with documentation of installation provided to info@skinact.com within 30 days of delivery.
- Plumbing connections must include shut-off valves, leak detectors, and drain pans as required by local code.
- Shampoo units and chairs must be bolted or secured to the floor to prevent shifting or stress on plumbing lines. Mobile use of plumbed equipment is strictly prohibited.
- Shampoo chairs must be anchored to the floor to prevent plumbing line stress or failure. Do not relocate the unit once it has been plumbed. Movement may cause leaks and void the warranty.

Lifespan Expectations & Maintenance


Component	Expected Lifespan	Required Maintenance
Flexible Water Hoses	1-2 years (replace annually in high usage)	Inspect quarterly, replace as needed
Drain Fittings & Traps	1-3 years	Clean monthly to prevent clogs
Spray Nozzles	1-2 years	Clean weekly to prevent mineral buildup
Electric Actuators	3-5 years	Keep dust-free; avoid overuse.
Ceramic/Porcelain Bowls	5-7 years	Avoid harsh chemicals, inspect yearly

Replacing high-wear parts at regular intervals is required to maintain warranty eligibility. Failure to maintain/replace parts voids coverage. The customer is solely responsible for verifying that the installation site is water-resistant, properly drained, and compliant with local plumbing codes. Any alterations to plumbing lines, hoses, or valves void all warranties. Hoses, fittings, and water-contact parts are considered wearable components and should be inspected monthly and replaced as needed, at least once per year for professional use. Failure to install equipment as instructed or maintain it regularly may result in voiding the warranty and rejection of damage claims.

Parts Included

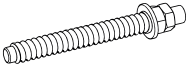
Qty	Part Name	Image
4	Expansion Screws	
1	Shampoo Bowl Mixer Faucet	
1	Shampoo Bowl Drain Strainer	

Dimensions

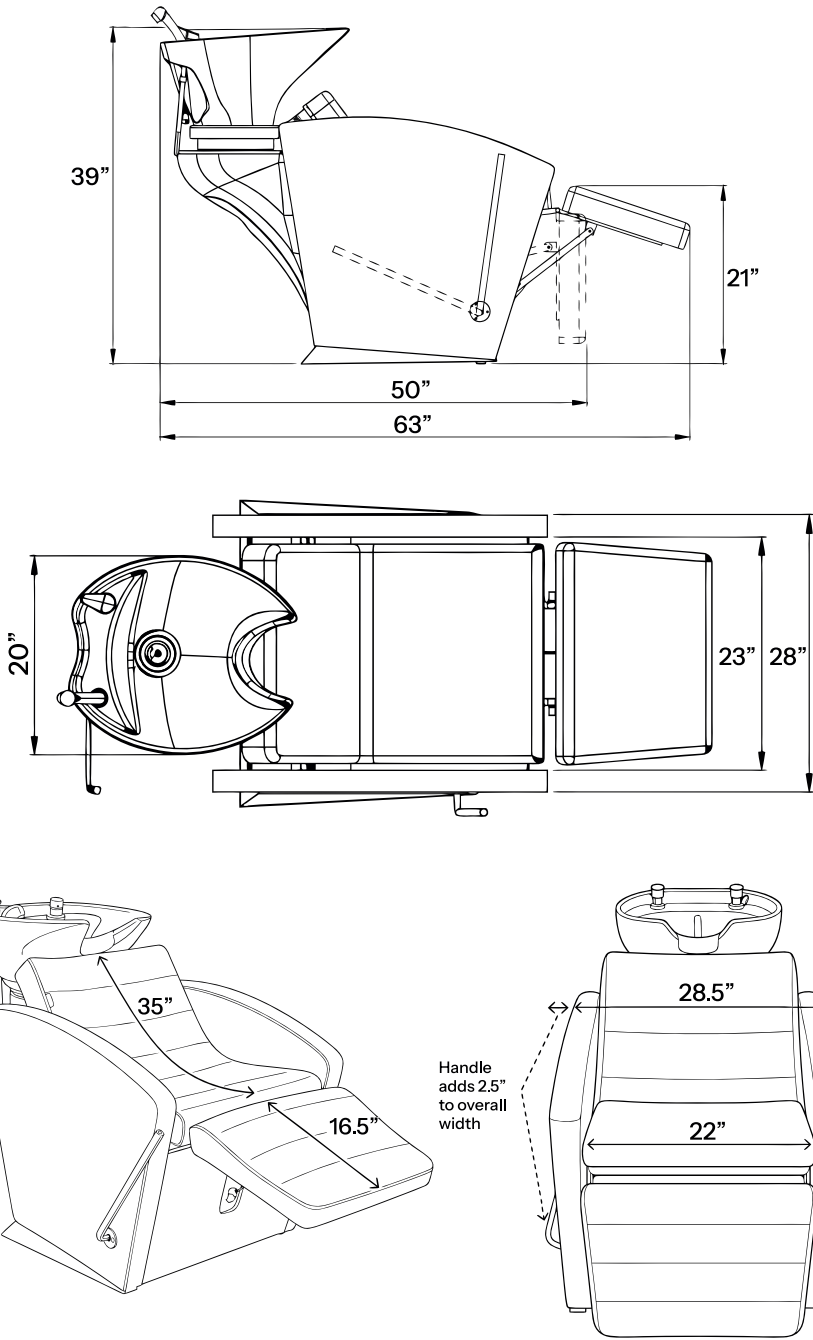


Expansion Screw Installation

Remove the rear cover and front panel from the base. Install the expansion bolts, then reinstall the rear cover and front panel securely.

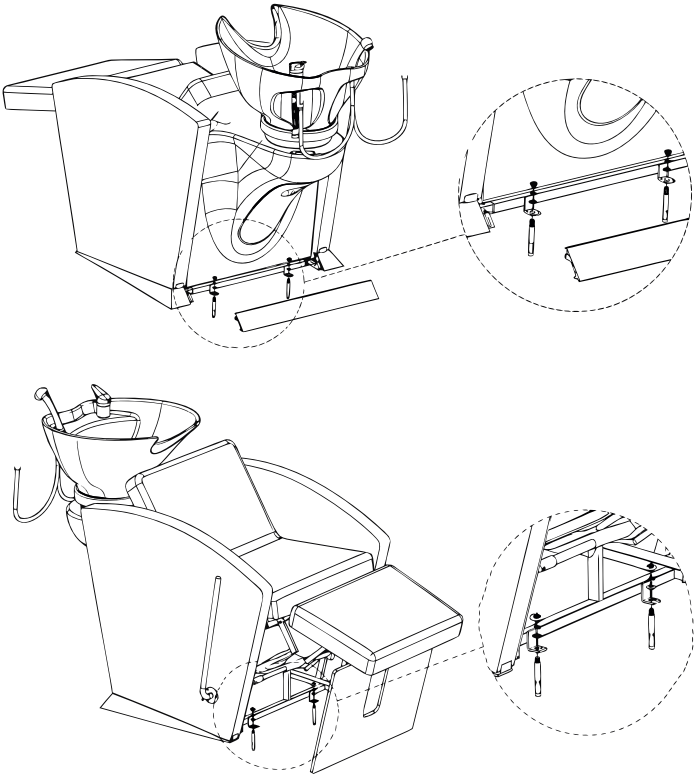


Shampoo Bowl Mixer Faucet Installation

1. Remove the four self-tapping screws from the rear cover of the shampoo unit, then remove the plastic cover plate.
2. Route the drain hose, cold-water supply line, and hot-water supply line through the opening.
3. Connect the two hoses from the single-handle faucet to the corresponding hot- and cold-water supply lines. Use the faucet handle to select and adjust the water temperature.

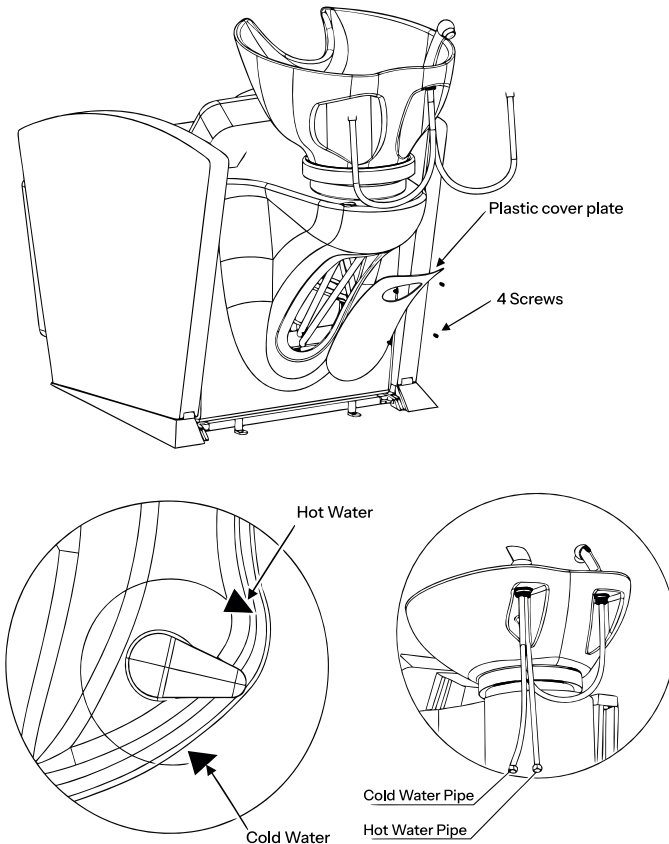


Footrest Control

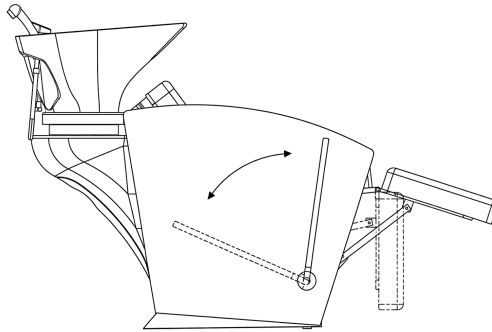

Push the lever forward to raise the footrest; push the lever backward to lower the footrest.

Shampoo Bowl Adjustment

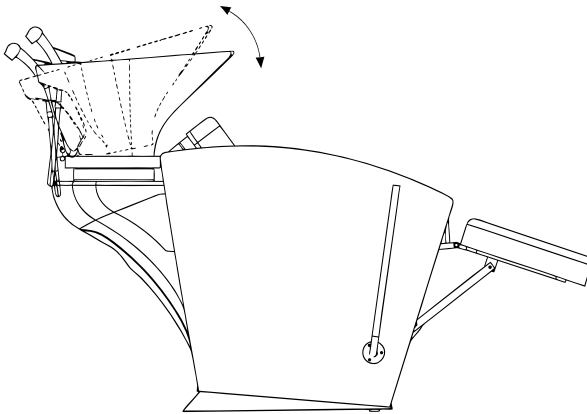

Manually adjust the shampoo bowl by gently tilting the bowl itself until it reaches a comfortable angle that accommodates the client's height and neck position.

Maintenance

- When cleaning and sanitizing, do not use bleach, Barricade, or other harsh chemicals. Using harsh chemicals can damage the upholstery.
- For best results, we recommend cleaning with SkinAct **All-In-One Upholstery & Disinfecting Multi-Purpose Cleaner** (SKU24261).
- Clean and sanitize the upholstery after each treatment.
- Every six months, visually inspect all visible parts of the unit. If there are any abnormal noises or vibrations during operation, call Spa & Equipment/SkinAct at 1-800-418-0830.

Troubleshooting

Abnormal Movement When Adjusting the Backrest

Solution: Stop operating the unit and inspect the screws and fasteners around the backrest mechanism. Tighten any loose hardware securely. If the abnormal movement continues, discontinue use and contact an authorized service technician.

Specifications

Product Name:	Elite Salon Shampoo Chair
Voltage:	AC 110-120 V
Frequency:	50/60 Hz
Width of the seat:	22"
Width of backrest including armrest:	28.5"
Backrest Length:	35"
Footrest Length:	16.5"
Height from ground to top of the bowl:	39"
Height from ground to top of the seat:	22"
Bowl Interior (L x W):	18.5" x 15"
Chair Base (L x W):	30" x 23.5"
Weight Capacity:	330 lbs
Product Weight:	136 lbs

Warranty Information

The manufacturer/warrantor warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and proper use for a period of one (1) year from the original date of purchase, unless otherwise stated in writing for a specific product.

This limited warranty applies only to the original purchaser and is not transferable. Proof of purchase may be required to obtain warranty service.

This warranty covers parts and labor required to correct defects in materials or workmanship during the warranty period. At the warrantor’s discretion, the product may be repaired, replaced, or substituted with a comparable item or component.

This warranty does not cover damage or defects caused by misuse, abuse, improper assembly, improper installation, unauthorized modification, unauthorized repair, neglect, accident, improper cleaning, use of harsh chemicals, power surges, water or liquid damage, use outside the intended purpose, failure to follow the product manual, or use with parts/accessories not approved by SkinAct.

This warranty does not cover normal wear and tear, cosmetic damage, upholstery wear, stains, discoloration, scratches, dents, wheels/casters, bulbs, glass parts, filters, tips, probes, disposable parts, consumables, or accessories subject to regular replacement unless the defect is determined to be due to a manufacturing issue.

The warrantor shall not be liable for loss of use, loss of time, loss of business, lost revenue, inconvenience, or any indirect, incidental, special, or consequential damages arising from the use of this product or from any defect covered by this warranty.

To request warranty service, contact the dealer or SkinAct customer support. If return service is required, the purchaser may be asked to return the product or the affected component for inspection. The purchaser is responsible for properly packaging the item and prepaying all shipping costs to send the item in for warranty service. If the issue is covered under warranty, repair or replacement will be performed at no charge, subject to the terms of this limited warranty.

Warranty does not cover damage, contamination, upholstery damage, sanitation-related issues, injury claims, or equipment issues resulting from improper cleaning, improper maintenance, misuse, use by untrained users, or use outside applicable safety guidelines. This limited warranty is the only written or express warranty provided by the warrantor. No employee, representative, dealer, or third party is authorized to modify or extend this warranty unless confirmed in writing by SkinAct. This warranty gives you specific legal rights, and you may also have other rights, which vary by state or province.

SKIN+ACT

Phone:1-800-418-0830
Email:info@skinact.com
Website:www.skinact.com